

HS 8



70 x 65,5 x 43,6

HS 9 X



85 x 75,5 x 78,6

HS 800



80 x 75,5 x 78,6

HS 1200



120 x 75,5 x 78,6

HS 1400



140 x 75,5 x 78,6

HS 1600



160 x 75,5 x 78,6

ERG 2005-L



160 x 75,5 x 110 (78,6 x 60)

ERG 2005-P



160 x 75,5 x 110 (60 x 78,6)

ERG 121



120 x 75,5 x 120 (78,6 x 78,6)

ERG 1800-L



180 x 75,5 x 120 (78,6 x 42)

ERG 1800-P



180 x 75,5 x 120 (42 x 78,6)

ERG 1000-L



180 x 75,5 x 100 (78,6)

ERG 1000-P



180 x 75,5 x 100 (78,6)

ERG 1200



120 x 75,5 x 60

HS 1200 1



120 x 75,5 x 78,6

HS 1200 2



120 x 75,5 x 78,6

HS 1600 1



160 x 75,5 x 78,6

HS 16 2



78,6 x 75,5 x 78,6

DHS 16 2



78,6 x _ x 78,6

HS 45



78,6 x 75,5 x 78,6

DHS 45



78,6 x _ x 78,6

HS 60



78,6 x 75,5 x 78,6

DHS 60



78,6 x _ x 78,6

HS 20-L



98 x 75,5 x 103

HS 20-P



98 x 75,5 x 103

HS 1800



180 x 75,5 x 78,6

ERG 60-L



160 x 75,5 x 110 (60 x 60)

ERG 60-P



160 x 75,5 x 110 (60 x 60)

ERG 80-L



160 x 75,5 x 110 (60 x 78,6)

ERG 80-P



160 x 75,5 x 110 (78,6 x 60)

ERG 1800 H-L



180 x 75,5 x 200 (78,6 x 42)

ERG 1800 H-P



180 x 75,5 x 200 (42 x 78,6)

ERG 1800 HR-L



180 x 75,5 x 200 (78,6 x 42)

ERG 1800 HR-P



180 x 75,5 x 200 (42 x 78,6)

HS 1600 2



160 x 75,5 x 110

HS 150

jednací stůl



150 x 75,5 x 90

HS 200

jednací stůl



200 x 75,5 x 110

HSN 1600*



160 x 75,5 (175) x 78,6

HS 16 1



78,6 x 75,5 x 78,6

DHS 16 1



78,6 x _ x 78,6

HS 21-L



ø 100 x 75,5 x (60 x 60)

HS 21-P



ø 100 x 75,5 x (60 x 60)

HS 22-L



ø 120 x 75,5 x (78,6 x 60)

HS 22-P



ø 120 x 75,5 x (60 x 78,6)

ERG 160



157,2 x 75,5 x 60

ERG 120



120 x 75,5 x 40

HS 14



78,6 x 75,5 x 40

ERG 30



60 x 75,5 x 30

* HSN 1600 nesmí stát samostatně v prostoru. Pouze u zdi či dva stoly HSN 1600 zády k sobě!

Rozměry jsou v pořadí šířka x výška x hloubka